

Instructions for connecting hoses and electrical coupling in BC60/8

Pressure from pump to port: Port P

Tank connection to port: Port T

SECTION 1 SWING

Swing to the left: Port A1 Inductor a1 Connector L4

Swing to the right: Port B1 Inductor b1 Connector L3

SECTION 2 ROTATOR

Rotator counterclockwise: Port A2 Inductor a2 Connector R3

Rotator clockwise: Port B2 Inductor b2 Connector R4

SECTION 3 GRAPPLE

Grapple closed: Port A3 Inductor a3 Connector RC

Grapple opened: Port B3 Inductor b3 Connector RD

SECTION 4 LEFT STABILATOR

Left stabilator down: Port A4 Inductor a4 Connector LA

Left stabilator up: Port B4 Inductor b4 Connector LB

SECTION 5 RIGHT STABILATOR

Right stabilator down: Port A5 Inductor a5 Connector RB

Right stabilator up: Port B5 Inductor b5 Connector RA

SECTION 6 EXTENSION TUBE

Extension tube in: Port A6 Inductor a6 Connector LC

Extension tube out: Port B6 Inductor b6 Connector LD

SECTION 7 MAIN BOOM

Main boom up: Port A7 Inductor a7 Connector R2

Main boom down: Port B7 Inductor b7 Connector R1

SECTION 8 SECOND BOOM

Second boom up: Port A8 Inductor a8 Connector L2

Second boom down: Port B8 Inductor b8 Connector L1

