
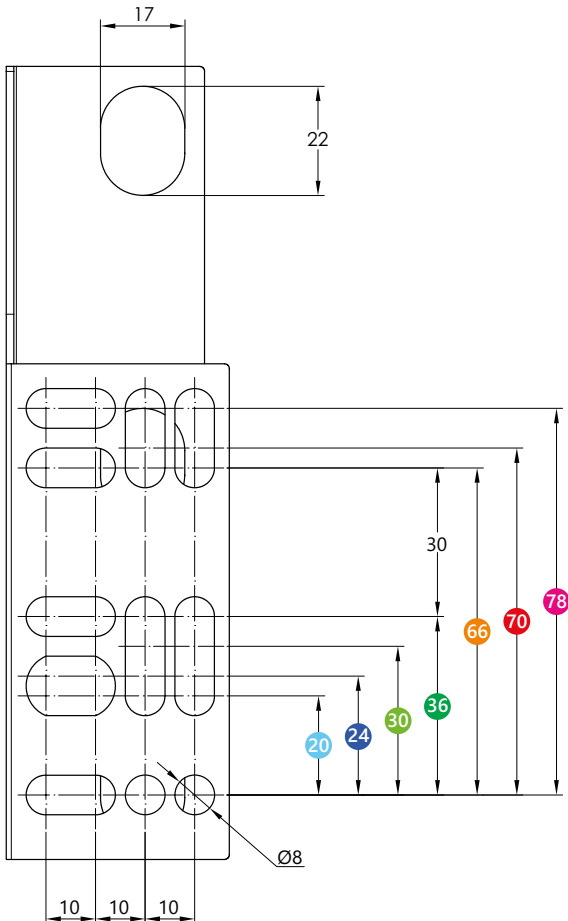


# Fixing and Installation

As you can see, the correct installation of the fixing feet is very simple, because the prints are designed for positioning twice right or left, and with availability of many different fixing positions, one of which is adjustable, a a fixing system extremely innovative and unique. This system allows while monitoring, an extreme adaptability to the chassis or equipment, where you want to install your **RAAL ITALY** exchanger. For a correct and functional installation, we recommend utilisation of special anti-vibration support.

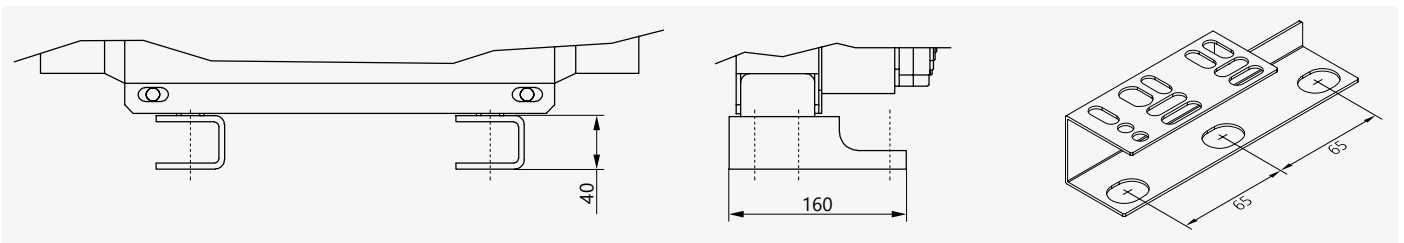

The **BRACKET** realized for **RAAL ITALY** exchangers, sheet metal zinc is unique, and has been studied specifically to be unified on all models.

Interaxe [mm]	GR Series	By-Pass Series	VT Series
20	GRS 25 GRS 100L	-	-
24	GRS/D 50 GRS/D 100 GRS/D 120 GRS/D 130	GRS/D By-Pass 50 GRS/D By-Pass 100 GRS/D By-Pass 130	VTS/D 50 VTS/D 60
30	GRS/D 80	-	-
36	GRS/D 150 GRS/D 200 GRS/D 300	GRS/D By-Pass 150 GRS/D By-Pass 200 GRS/D By-Pass 300	VTS/D 150 VTS/D 180 VTS/D 210
66	GRS/D 500	GRS/D By-Pass 500	-
70	GRS/D 700	-	-
78	-	-	VTS/D 210