POWER ON->LOGO WILL BE DISPLAYED 1 SECOND







TOUCH ON CLOCK -> CLOCK AND DISPLAY BRIGHTNESS ADJUSTMENT PAGE



MAIN PAGE



TOUCH ON SOME YELLOW DOT ON CRANE OR GOGBAR -> PARAMETRE ADJUSTMENT PAGE




TOUCH ON MANOMETER -> MANOMETER LAYOUT




KEEP FINGER ON YELLOW DOT IN RIGHT BOTTOM CORNER -> SERVICE PAGE VIA PIN CODE PAGE




PIN CODE -> ENTER-> SERVICE PAGE

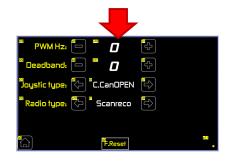


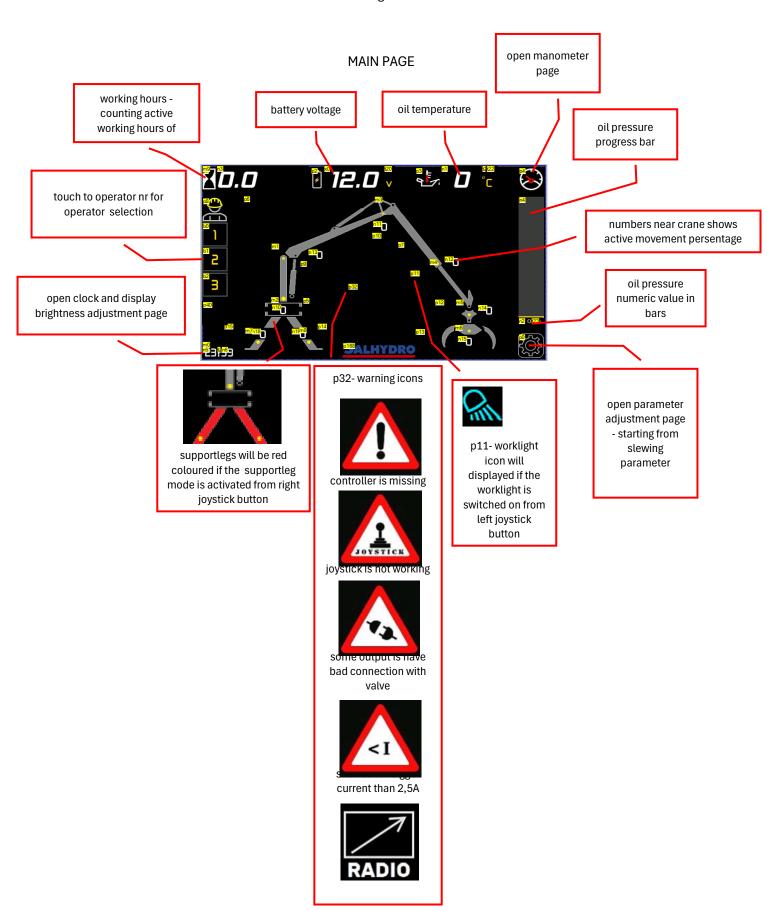

WORKING HOUR LOG PAGE

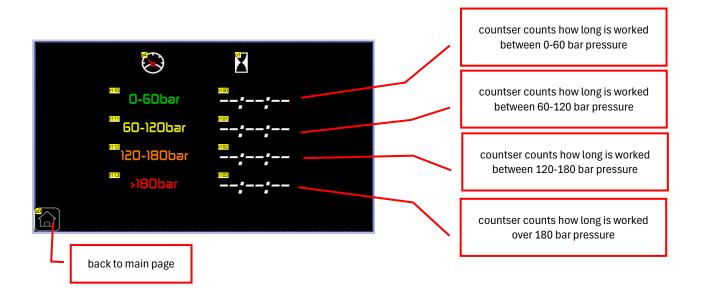

MANOMETER LAYOUT PAGE

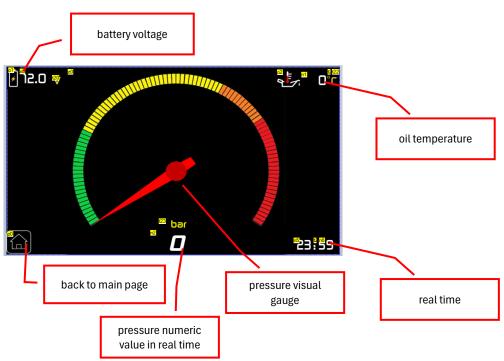

Page 4 of 4 WK5D user manual

